

12 REPLACEMENT PARTS



WARNING!

Risk of injury when opening the actuator!

The actuator contains a tensioned spring. If the actuator is opened, there is a risk of injury from the spring jumping out!

- ▶ The actuator must not be opened.



CAUTION!

Risk of injury and/or damage by the use of incorrect parts!

Incorrect accessories and unsuitable replacement parts may cause injuries and damage the device and the surrounding area.

- ▶ Use only original accessories and original replacement parts from Bürkert.

12.1 Replacement part sets

Replacement part sets for the angle-seat control valve Type 2300:

- Control cone set consisting of control cone, dowel pin, seal and lubricant.
- Sealing set for packing gland consisting of the individual parts of the packing gland, seal and lubricant (the (modified) socket wrench is not included in the sealing set).
- Spindle guide for packing gland consisting of VA spindle guide, seal and lubricant.

Control cone set			
DN	Actuator size [mm]	Order no.	
		PTFE / Steel	Steel / Steel
15	∅ 50, ∅ 70	170 315	170 322
20	∅ 50, ∅ 70	170 316	170 323
25	∅ 50, ∅ 70, ∅ 90	170 318	170 324
32	∅ 70	170 319	170 325
	∅ 90, ∅ 130	226 941	226 925
40	∅ 90, ∅ 130	226 945	225 423
50	∅ 90, ∅ 130	226 948	225 426
65	∅ 130	226 950	225 427

Tab. 23: Control cone set

Sealing set for packing gland			
Spindle ∅ [mm]	DN	Actuator size [mm]	Order no.
10	15 – 32	∅ 50	216 436
		∅ 70	
14	25 – 50	∅ 90	216 438
		∅ 130	
22	65	∅ 130	252 545

Tab. 24: Sealing set for packing gland