

PNOZ 1




Safety relays

This document is a translation of the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Source code from third-party manufacturers or open source software has been used for some components. The relevant licence information is available on the Internet on the Pilz homepage.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.

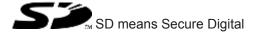

Introduction	4
Validity of documentation	4
Using the documentation	4
Definition of symbols	4
Safety	5
Intended use	5
Safety regulations	5
Safety assessment	5
Use of qualified personnel	5
Warranty and liability	6
Disposal	6
For your safety	6
Unit features	7
Safety features	7
Block diagram/terminal configuration	7
Types: AC	7
Type: DC	8
Function Description	8
Operating modes	8
Timing diagram	9
Installation	9
Wiring	9
Preparing for operation	10
Operation	12
Status indicators	12
Faults - Interference	12
Dimensions in mm	13
Technical details	13
Safety characteristic data	22
Supplementary data	22
Service life graph	23
Order reference	
	23
EC declaration of conformity	23

Introduction

Validity of documentation

This documentation is valid for the product PNOZ 1. It is valid until new documentation is published.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.

PNOZ 1 PILZ



INFORMATION

This gives advice on applications and provides information on special fea-

Safety

Intended use

The safety relay PNOZ 1 provides a safety-related interruption of a safety circuit.

The safety relay meets the requirements of EN 60947-5-1, EN 60204-1 and VDE 0113-1 and may be used in applications with

- ▶ E-STOP pushbuttons
- Safety gates

The following is deemed improper use in particular:

- Any component, technical or electrical modification to the product
- Use of the product outside the areas described in this manual
- Use of the product outside the technical details (see Technical details [44] 13]).



NOTICE

EMC-compliant electrical installation

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

Safety regulations

Safety assessment

Before using a unit it is necessary to perform a safety assessment in accordance with the Machinery Directive.

Functional safety is guaranteed for the product as a single component. However, this does not guarantee the functional safety of the overall plant/machine. In order to achieve the required safety level for the overall plant/machine, define the safety requirements for the plant/machine and then define how these must be implemented from a technical and organisational standpoint.

Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by competent persons.

A competent person is someone who, because of their training, experience and current professional activity, has the specialist knowledge required to test, assess and operate the work equipment, devices, systems, plant and machinery in accordance with the general standards and guidelines for safety technology.

It is the company's responsibility only to employ personnel who:

- Are familiar with the basic regulations concerning health and safety / accident prevention
- Have read and understood the information provided in this description under "Safety"
- And have a good knowledge of the generic and specialist standards applicable to the specific application.

Warranty and liability

All claims to warranty and liability will be rendered invalid if

- The product was used contrary to the purpose for which it is intended
- Damage can be attributed to not having followed the guidelines in the manual
- Operating personnel are not suitably qualified
- Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

Disposal

- In safety-related applications, please comply with the mission time T_M in the safety-related characteristic data.
- When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

For your safety

The unit meets all the necessary conditions for safe operation. However, please note the following:

Note for overvoltage category III: If voltages higher than low voltage (>50 VAC or >120 VDC) are present on the unit, connected control elements and sensors must have a rated insulation voltage of at least 250 V.

Unit features

- Positive-guided relay outputs:
 - 3 safety contacts (N/O), instantaneous
 - 1 auxiliary contact (N/C), instantaneous
- Connection options for:
 - E-STOP pushbutton
 - Safety gate limit switch
 - Start button
- LED display for:
 - Supply voltage
 - Switch status of the safety contacts
- See order reference for unit types

Safety features


The safety relay meets the following safety requirements:

- The circuit is redundant with built-in self-monitoring.
- > The safety function remains effective in the case of a component failure.
- The correct opening and closing of the safety function relays is tested automatically in each on-off cycle.

Block diagram/terminal configuration

Types: AC


- U_B: 24 VAC; Order no. 775600
- U_B: 48 VAC; Order no. 775620
- ▶ U_B: 110 120 VAC; Order no. 775630
- U_B: 230 240 VAC; Order no. 775650

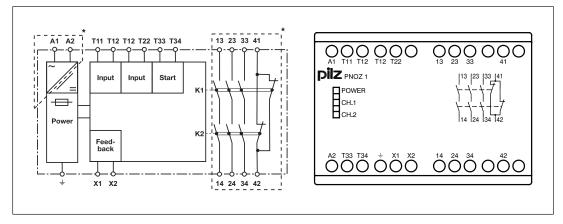

^{*}Insulation between the non-marked area and the relay contacts: Basic insulation (over-voltage category III), Protective separation (overvoltage category II)

Type: DC

U_B: 24 VDC; Order no. 775695

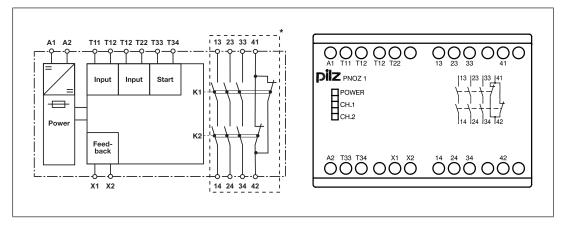

^{*}Insulation between the non-marked area and the relay contacts: Basic insulation (over-voltage category III), Protective separation (overvoltage category II)

Function Description

The safety relay PNOZ 1 provides a safety-oriented interruption of a safety circuit. When supply voltage is supplied the "POWER" LED is lit. The unit is ready for operation when the feedback loop X1-X2 and the start circuit T33-T34 are closed.

- Input circuit is closed (e.g. E-STOP pushbutton not operated):
 - The LEDs "CH.1" and "CH.2" are lit.
 - Safety contacts 13-14, 23-24 and 33-34 are closed, auxiliary contact 41-42 is open.
 The unit is active.
- Input circuit is opened (e.g. E-STOP pushbutton operated):
 - The LEDs "CH.1" and "CH.2" go out.
 - Safety contacts 13-14, 23-24 and 33-34 are opened redundantly, auxiliary contact 41-42 is closed.



NOTICE


If the safety requirement (e.g. E-STOP pushbutton operated) is triggered < 6 s after starting, the delay-on de-energisation of the instantaneous safety contacts may be increased (see Technical details [413]).

Operating modes

- Single-channel operation: No redundancy in the input circuit, earth faults in the start and input circuit are detected.
- Dual-channel operation without detection of shorts across contacts: Redundant input circuit, detects PNOZ 1
 - earth faults in the start and input circuit,
 - short circuits in the input circuit.
- Automatic start: Unit is active once the input circuit has been closed.

- Manual start: Unit is active once the input circuit and the start circuit are closed.
- Increase in the number of available contacts by connecting contact expander modules or external contactors/relays.

Timing diagram

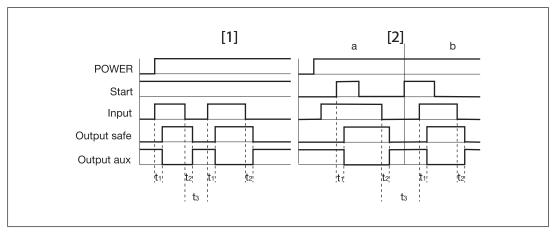

Legend

Power: Supply voltage

Start: Start circuit

Input: Input circuit

Output safe: Safety contacts

Output aux: Auxiliary contact

[1]: Automatic start

[2]: Manual start

a: Input circuit closes before start circuit

b: Start circuit closes before input circuit

t₁: Switch-on delay

t₂: Delay-on de-energisation

t₃: Recovery time

Installation

- The unit should be installed in a control cabinet with a protection type of at least IP54.
- Use the notch on the rear of the unit to attach it to a DIN rail.
- Ensure the unit is mounted securely on a vertical DIN rail (35 mm) by using a fixing element (e.g. retaining bracket or an end angle).

Wiring

Please note:

- Information given in the "Technical details [13]" must be followed.
- Outputs 13-14, 23-24, 33-34 are safety contacts; output 41-42 is an auxiliary contact (e.g. for display).
- Auxiliary contact 41-42 should **not** be used for safety circuits!

- Do not connect undesignated terminals.
- To prevent contact welding, a fuse should be connected before the output contacts (see Technical details [44 13]).
- ▶ Calculation of the max. cable runs I_{max} in the input circuit:

$$I_{max} = \frac{R_{lmax}}{R_l / km}$$

 R_{lmax} = max. overall cable resistance (see Technical details [13]) R_l / km = cable resistance/km

- ▶ Use copper wire that can withstand 60/75 °C.
- Do not switch low currents using contacts that have been used previously with high currents.
- Sufficient fuse protection must be provided on all output contacts with capacitive and inductive loads.
- On 24 VDC devices:

The power supply must comply with the regulations for extra low voltages with protective electrical separation (SELV, PELV) in accordance with VDE 0100, Part 410.

▶ Ensure the wiring and EMC requirements of IEC 60204-1 are met.

Preparing for operation

Supply voltage	AC	DC
	L1	L+
	A2 \$\dots \cdot \c	İ
	 FE	A2 0 L-

Input circuit	Single-channel	Dual-channel	
E-STOP without detection of shorts across contacts	T11 0 T12 0 T22 0	T11 0 S1 7 T12 0 T22 0	
Safety gate without detection of shorts across contacts	T11 0 S1 T12 0 T22 0	T11 S1 S2 T12 C	



NOTICE

With single-channel wiring the safety level of your machine/plant may be lower than the safety level of the unit (see Safety characteristic data [22]).

	E-STOP wiring (single-channel, dual-channel)	
Start circuit	Safety gate (single-channel)	Safety gate (dual-channel)
Automatic start	T33 \$	T33 0
	T34 O	T34 O-J
Automatic start with start-up test		
Manual start	T33 0 S3	T34 0



NOTICE

In the event of an automatic start or manual start with bridged start contact (fault):

The unit starts up automatically when the safeguard is reset, e.g. when the E-STOP pushbutton is released. Use external circuit measures to prevent an unexpected restart.

Feedback loop	without feedback loop monitoring	With feedback loop monitoring
Link or contacts from external contactors	X1 ¢	X1

Legend

S1/S2: E-STOP/safety gate switch

S3: Reset button

► 1: Switch operated

▶ I: Gate open

▶ **1**: Gate closed

Operation



NOTICE

Check each safety function

- after initial commissioning and after each change of the machine/ plant
- for SIL CL 3/PL e at least 1x per month, for SIL CL 2/PL d at least 1x per year

Follow the instructions below:

- Activate the safety function and check whether all the used safety contacts open.
- Prepare for operation again and start the unit. All the used safety contacts must be closed again.

The safety functions may only be checked by qualified personnel.

Status indicators

LEDs indicate the status and errors during operation:

_____ LED on

POWER
Supply voltage is present.

___ CH.1

Safety contacts of channel 1 are closed.


CH.2
Safety contacts of channel 2 are closed.

Faults - Interference

- Earth fault: The supply voltage fails and the safety contacts open. Once the cause of the respective fault has been rectified and the supply voltage is switched off for approx. 1 minute, the unit is ready for operation again.
- Contact malfunctions: If the contacts have welded, reactivation will not be possible after the input circuit has opened.

LED "POWER" does not light: Short circuit or no supply voltage.

Dimensions in mm

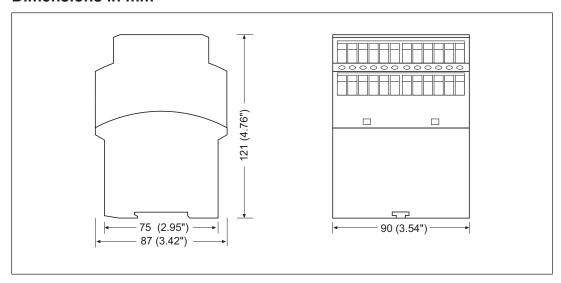

Technical details

Order no. 775600 - 775620

See below for more order numbers

General	775600	775620
Approvals	CCC, CE, EAC (Eurasian), TÜV, cULus Listed	CCC, CE, EAC (Eurasian), TÜV, cULus Listed
Electrical data	775600	775620
Supply voltage		
Voltage	24 V	48 V
Kind	AC	AC
Voltage tolerance	-15 %/+10 %	-15 %/+10 %
Output of external power supply		
(AC)	5,5 VA	5,5 VA
Frequency range AC	50 - 60 Hz	50 - 60 Hz
Duty cycle	100 %	100 %
Inputs	775600	775620
Number	2	2
Voltage at		
Input circuit DC	24 V	24 V
Start circuit DC	24 V	24 V
Feedback loop DC	24 V	24 V
Current at		
Input circuit DC	30 mA	30 mA
Start circuit DC	50 mA	50 mA
Feedback loop DC	50 mA	50 mA

Inputs	775600	775620	
Max. overall cable resistance RI-			
max			
Single-channel at UB AC	200 Ohm	200 Ohm	
Dual-channel without detection			
of shorts across contacts at UB	050 Ob	050 Okaza	
AC Polou outoute	350 Ohm	350 Ohm	
Relay outputs	775600	775620	
Number of output contacts			
Safety contacts (N/O), instant- aneous	3	3	
Auxiliary contacts (N/C)	1	1	
Max. short circuit current IK	1 kA	1 kA	
Utilisation category	1101	1101	
In accordance with the standard	EN 60947-4-1	EN 60947-4-1	
Utilisation category of safety con-		211 00041 4 1	
tacts			
AC1 at	400 V	400 V	
Min. current	0,01 A	0,01 A	
Max. current	5 A	5 A	
Max. power	2000 VA	2000 VA	
AC1 at	240 V	240 V	
Min. current	0,01 A	0,01 A	
Max. current	8 A	8 A	
Max. power	2000 VA	2000 VA	
DC1 at	24 V	24 V	
Min. current	0,01 A	0,01 A	
Max. current	8 A	8 A	
Max. power	200 W	200 W	
Utilisation category of auxiliary con	-		
tacts AC1 at	240 V	240 V	
	0,01 A	240 V 0,01 A	
Min. current Max. current	8 A	8 A	
Max. power	2000 VA	2000 VA	
DC1 at	24 V	24 V	
Min. current	0,01 A	0,01 A	
Max. current	8 A	8 A	
Max. power	200 W	200 W	
Utilisation category	<u> </u>		
In accordance with the standard	EN 60947-5-1	EN 60947-5-1	
Utilisation category of safety contacts	-		
AC15 at	230 V	230 V	
Max. current	5 A	5 A	
DC13 (6 cycles/min) at	24 V	24 V	
Max. current	7 A	7 A	
	_		

Relay outputs	775600	775620	
Utilisation category of auxiliary con-			
tacts			
AC15 at	230 V	230 V	
Max. current	5 A	5 A	
DC13 (6 cycles/min) at	24 V	24 V	
Max. current	7 A	7 A	
Utilisation category in accordance with UL			
Voltage	240 V AC G. P.	240 V AC G. P.	
With current	8 A	8 A	
Voltage	24 V DC Resistive	24 V DC Resistive	
With current	5 A	5 A	
Pilot Duty	B300, R300	B300, R300	
External contact fuse protection, safety contacts			
In accordance with the standard	EN 60947-5-1	EN 60947-5-1	
Max. melting integral	240 A ² s	240 A²s	
Blow-out fuse, quick	10 A	10 A	
Blow-out fuse, slow	6 A	6 A	
Blow-out fuse, gG	10 A	10 A	
Circuit breaker 24V AC/DC, characteristic B/C	6 A	6 A	
External contact fuse protection, auxiliary contacts			
Max. melting integral	240 A²s	240 A²s	
Blow-out fuse, quick	10 A	10 A	
Blow-out fuse, slow	6 A	6 A	
Blow-out fuse, gG	10 A	10 A	
Circuit breaker 24 V AC/DC,			
characteristic B/C	6 A	6 A	
Conventional thermal current	8 A	8 A	
Contact material	AgSnO2 + 0,2 μm Au	AgSnO2 + 0,2 μm Au	
Times	775600	775620	
Switch-on delay			
With automatic start typ.	190 ms	190 ms	
With automatic start max.	270 ms	270 ms	
With automatic start after power			
on typ.	215 ms	215 ms	
With automatic start after power	220	220	
on max.	320 ms	320 ms	
With manual start typ.	190 ms	190 ms	
With manual start max.	270 ms	270 ms	

Times	775600	775620
Delay-on de-energisation		
With E-STOP typ.	15 ms	15 ms
With E-STOP, duty cycle ≥ 6 s,	- · · · ·	
max.	30 ms	30 ms
With E-STOP, duty cycle < 6 s,		
max.	400 ms	400 ms
With power failure typ.	60 ms	60 ms
With power failure max.	400 ms	400 ms
Recovery time at max. switching frequency 1/s		
After E-STOP	300 ms	300 ms
After power failure	350 ms	350 ms
Supply interruption before de-ener-		
gisation	35 ms	35 ms
Simultaneity, channel 1 and 2 max.	140 ms	140 ms
Environmental data	775600	775620
Climatic suitability	EN 60068-2-78	EN 60068-2-78
Ambient temperature		
Temperature range	-10 - 55 °C	-10 - 55 °C
Storage temperature		
Temperature range	-40 - 85 °C	-40 - 85 °C
Climatic suitability		
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Oanalanaattan duntum (1		B
Condensation during operation	Not permitted	Not permitted
EMC	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1
	EN 60947-5-1, EN 61000-6-2, EN	EN 60947-5-1, EN 61000-6-2, EN
EMC	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1	EN 60947-5-1, EN 61000-6-2, EN
EMC Vibration	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1
Vibration In accordance with the standard	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6
Vibration In accordance with the standard Frequency	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz
Vibration In accordance with the standard Frequency Amplitude	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz
Vibration In accordance with the standard Frequency Amplitude Airgap creepage	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm
Vibration In accordance with the standard Frequency Amplitude Airgap creepage In accordance with the standard	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1
Vibration In accordance with the standard Frequency Amplitude Airgap creepage In accordance with the standard Overvoltage category	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II
Vibration In accordance with the standard Frequency Amplitude Airgap creepage In accordance with the standard Overvoltage category Pollution degree	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II
Vibration In accordance with the standard Frequency Amplitude Airgap creepage In accordance with the standard Overvoltage category Pollution degree Rated insulation voltage	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II 2 400 V	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II 2 400 V
Vibration In accordance with the standard Frequency Amplitude Airgap creepage In accordance with the standard Overvoltage category Pollution degree Rated insulation voltage Rated impulse withstand voltage Protection type Mounting area (e.g. control cab-	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II 2 400 V	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II 2 400 V
Vibration In accordance with the standard Frequency Amplitude Airgap creepage In accordance with the standard Overvoltage category Pollution degree Rated insulation voltage Rated impulse withstand voltage Protection type Mounting area (e.g. control cabinet)	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II 2 400 V 4 kV	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II 2 400 V 4 kV
Vibration In accordance with the standard Frequency Amplitude Airgap creepage In accordance with the standard Overvoltage category Pollution degree Rated insulation voltage Rated impulse withstand voltage Protection type Mounting area (e.g. control cab-	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II 2 400 V 4 kV	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II 2 400 V 4 kV
Vibration In accordance with the standard Frequency Amplitude Airgap creepage In accordance with the standard Overvoltage category Pollution degree Rated insulation voltage Rated impulse withstand voltage Protection type Mounting area (e.g. control cabinet) Housing	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II 2 400 V 4 kV	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II 2 400 V 4 kV
Vibration In accordance with the standard Frequency Amplitude Airgap creepage In accordance with the standard Overvoltage category Pollution degree Rated insulation voltage Rated impulse withstand voltage Protection type Mounting area (e.g. control cabinet) Housing Terminals Mechanical data	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II 2 400 V 4 kV IP54 IP40 IP20 775600	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II 2 400 V 4 kV
Vibration In accordance with the standard Frequency Amplitude Airgap creepage In accordance with the standard Overvoltage category Pollution degree Rated insulation voltage Rated impulse withstand voltage Protection type Mounting area (e.g. control cabinet) Housing Terminals	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II 2 400 V 4 kV	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1 EN 60068-2-6 10 - 55 Hz 0,35 mm EN 60947-1 III / II 2 400 V 4 kV IP54 IP40 IP20 775620

Mechanical data	775600	775620
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Тор	PPO UL 94 V0	PPO UL 94 V0
Connection type	Screw terminal	Screw terminal
Mounting type	Fixed	Fixed
Conductor cross section with screw terminals		
1 core flexible	0,2 - 4 mm², 24 - 10 AWG	0,2 - 4 mm², 24 - 10 AWG
2 core with the same cross section, flexible with crimp connectors, no plastic sleeve	0,2 - 2,5 mm², 24 - 14 AWG	0,2 - 2,5 mm², 24 - 14 AWG
2 core with the same cross sec- tion, flexible without crimp con- nectors or with TWIN crimp con- nectors	0,2 - 2,5 mm², 24 - 14 AWG	0,2 - 2,5 mm², 24 - 14 AWG
	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·
Torque setting with screw terminals	חוא ס,ט	0,6 Nm
Dimensions		
Height	87 mm	87 mm
Width	90 mm	90 mm
Depth	121 mm	121 mm
Weight	500 g	500 g

Where standards are undated, the 2014-07 latest editions shall apply.

Order no. 775630 -775695

General	775630	775650	775695
Approvals	CCC, CE, EAC (Eurasian), TÜV, cULus Listed	CCC, CE, EAC (Eurasian), TÜV, cULus Listed	CCC, CE, EAC (Eurasian), TÜV, cULus Listed
Electrical data	775630	775650	775695
Supply voltage			
Voltage	110 - 120 V	230 - 240 V	24 V
Kind	AC	AC	DC
Voltage tolerance	-15 %/+10 %	-15 %/+10 %	-15 %/+10 %
Output of external power supply (AC)	5,5 VA	5,5 VA	_
Output of external power supply (DC)	_	_	2,5 W
Frequency range AC	50 - 60 Hz	50 - 60 Hz	_
Residual ripple DC	_	_	160 %
Duty cycle	100 %	100 %	100 %
Max. inrush current impulse			
Current pulse, A1	_	_	10 A
Pulse duration, A1		_	0,25 ms

Inputs	775630	775650	775695
Number	2	2	2
Voltage at			,
Input circuit DC	24 V	24 V	24 V
Start circuit DC	24 V	24 V	24 V
Feedback loop DC	24 V	24 V	24 V
Current at			
Input circuit DC	30 mA	30 mA	40 mA
Start circuit DC	50 mA	50 mA	50 mA
Feedback loop DC	50 mA	50 mA	50 mA
Max. overall cable resistance Rlmax			
Single-channel at UB DC	_	_	150 Ohm
Single-channel at UB AC	200 Ohm	200 Ohm	_
Dual-channel without detection of shorts across contacts at UB DC	_	_	250 Ohm
Dual-channel without detection of shorts across contacts at UB AC	350 Ohm	350 Ohm	
	-		775605
Relay outputs	775630	775650	775695
Number of output contacts			
Safety contacts (N/O), instantaneous	3	3	3
Auxiliary contacts (N/C	-	1	1
Max. short circuit current		<u>'</u>	
IK	1 kA	1 kA	1 kA
Utilisation category			
In accordance with the standard	EN 60947-4-1	EN 60947-4-1	EN 60947-4-1
Utilisation category of safety contacts			
AC1 at	400 V	400 V	400 V
Min. current	0,01 A	0,01 A	0,01 A
Max. current	5 A	5 A	5 A
Max. power	2000 VA	2000 VA	2000 VA
AC1 at	240 V	240 V	240 V
Min. current	0,01 A	0,01 A	0,01 A
Max. current	8 A	8 A	8 A
Max. power	2000 VA	2000 VA	2000 VA
DC1 at	24 V	24 V	24 V
Min. current	0,01 A	0,01 A	0,01 A
Max. current	8 A	8 A	8 A
Max. power	200 W	200 W	200 W

Relay outputs	775630	775650	775695	
Utilisation category of				
auxiliary contacts				
AC1 at	240 V	240 V	240 V	
Min. current	0,01 A	0,01 A	0,01 A	
Max. current	8 A	8 A	8 A	
Max. power	2000 VA	2000 VA	2000 VA	
DC1 at	24 V	24 V	24 V	
Min. current	0,01 A	0,01 A	0,01 A	
Max. current	8 A	8 A	8 A	
Max. power	200 W	200 W	200 W	
Utilisation category				
In accordance with the standard	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1	
Utilisation category of safety contacts				
AC15 at	230 V	230 V	230 V	
Max. current	5 A	5 A	5 A	
DC13 (6 cycles/min) at	24 V	24 V	24 V	
Max. current	7 A	7 A	7 A	
Utilisation category of auxiliary contacts				
AC15 at	230 V	230 V	230 V	
Max. current	5 A	5 A	5 A	
DC13 (6 cycles/min) at	24 V	24 V	24 V	
Max. current	7 A	7 A	7 A	
Utilisation category in accordance with UL				
Voltage	240 V AC G. P.	240 V AC G. P.	240 V AC G. P.	
With current	8 A	8 A	8 A	
Voltage	24 V DC Resistive	24 V DC Resistive	24 V DC Resistive	
With current	5 A	5 A	5 A	
Pilot Duty	B300, R300	B300, R300	B300, R300	
External contact fuse protection, safety contacts				
In accordance with the				
standard	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1	
Max. melting integral	240 A ² s	240 A²s	240 A ² s	
Blow-out fuse, quick	10 A	10 A	10 A	
Blow-out fuse, slow	6 A	6 A	6 A	
Blow-out fuse, gG	10 A	10 A	10 A	
Circuit breaker 24V AC/DC, characteristic B/C	6 A	6 A	6 A	
	-			

Relay outputs	775630	775650	775695
External contact fuse protection, auxiliary contacts			
Max. melting integral	240 A²s	240 A²s	240 A ² s
Blow-out fuse, quick	10 A	10 A	10 A
Blow-out fuse, slow	6 A	6 A	6 A
Blow-out fuse, gG	10 A	10 A	10 A
Circuit breaker 24 V		.07.	
AC/DC, characteristic			
B/C	6 A	6 A	6 A
Conventional thermal cur-			
rent	8 A	8 A	8 A
Contact material	AgSnO2 + 0,2 μm Au	AgSnO2 + 0,2 µm Au	AgSnO2 + 0,2 μm Au
Times	775630	775650	775695
Switch-on delay			
With automatic start			
typ.	190 ms	190 ms	190 ms
With automatic start			
max.	270 ms	270 ms	250 ms
With automatic start			
after power on typ.	215 ms	215 ms	190 ms
With automatic start			
after power on max.	320 ms	320 ms	250 ms
With manual start typ.	190 ms	190 ms	190 ms
With manual start max.	270 ms	270 ms	250 ms
Delay-on de-energisation			
With E-STOP typ.	15 ms	15 ms	15 ms
With E-STOP, duty			
cycle ≥ 6 s, max.	30 ms	30 ms	30 ms
With E-STOP, duty			
cycle < 6 s, max.	400 ms	400 ms	400 ms
With power failure typ.	60 ms	60 ms	60 ms
With power failure max.	. 400 ms	400 ms	400 ms
Recovery time at max.			
switching frequency 1/s			
After E-STOP	300 ms	300 ms	300 ms
After power failure	350 ms	350 ms	350 ms
Supply interruption before			
de-energisation	35 ms	35 ms	35 ms
Simultaneity, channel 1			
and 2 max.	140 ms	140 ms	140 ms
Environmental data	775630	775650	775695
Climatic suitability	EN 60068-2-78	EN 60068-2-78	EN 60068-2-78
Ambient temperature			
Temperature range	-10 - 55 °C	-10 - 55 °C	-10 - 55 °C
Storage temperature	10 00 0	.0 00 0	
• .	40 05 00	40 05 00	40 0E 00
Temperature range	-40 - 85 °C	-40 - 85 °C	-40 - 85 °C
Climatic suitability			
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C	93 % r. h. at 40 °C

Environmental data	775630	775650	775695	
Condensation during op-				
eration	Not permitted	Not permitted	Not permitted	
EMC	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1	EN 60947-5-1, EN	EN 60947-5-1, EN	
Vibration				
In accordance with the				
standard	EN 60068-2-6	EN 60068-2-6	EN 60068-2-6	
Frequency	10 - 55 Hz	10 - 55 Hz	10 - 55 Hz	
Amplitude	0,35 mm	0,35 mm	0,35 mm	
Airgap creepage				
In accordance with the standard	EN 60947-1	EN 60947-1	EN 60947-1	
Overvoltage category	III / II	III / II	III / II	
Pollution degree	2	2	2	
Rated insulation voltage	400 V	400 V	400 V	
Rated impulse withstand				
voltage	4 kV	4 kV	4 kV	
Protection type				
Mounting area (e.g.				
control cabinet)	IP54	IP54	IP54	
Housing	IP40	IP40	IP40	
Terminals	IP20	IP20	IP20	
Mechanical data	775630	775650	775695	
Mounting position	Any	Any	Any	
Mechanical life	10,000,000 cycles	10,000,000 cycles	10,000,000 cycles	
Material				
Bottom	PPO UL 94 V0	PPO UL 94 V0	PPO UL 94 V0	
Front	ABS UL 94 V0	ABS UL 94 V0	ABS UL 94 V0	
Тор	PPO UL 94 V0	PPO UL 94 V0	PPO UL 94 V0	
Connection type	Screw terminal	Screw terminal	Screw terminal	
Mounting type	Fixed	Fixed	Fixed	
Conductor cross section with screw terminals				
1 core flexible	0,2 - 4 mm ² , 24 - 10 AWG	0,2 - 4 mm ² , 24 - 10 AWG	0,2 - 4 mm², 24 - 10 AWG	
2 core with the same cross section, flexible	0.2 2.5 mm ² 24 44	0.2 2.5 mm² 24 44	0.2. 2.5 mm² 24. 44	
with crimp connectors, no plastic sleeve	0,2 - 2,5 mm ² , 24 - 14 AWG	0,2 - 2,5 mm ² , 24 - 14 AWG	0,2 - 2,5 mm², 24 - 14 AWG	
2 core with the same cross section, flexible without crimp connect- ors or with TWIN crimp connectors	0,2 - 2,5 mm², 24 - 14 AWG	0,2 - 2,5 mm², 24 - 14 AWG	0,2 - 2,5 mm², 24 - 14 AWG	
Torque setting with screw terminals	0,6 Nm	0,6 Nm	0,6 Nm	

Mechanical data	775630	775650	775695	
Dimensions				_
Height	87 mm	87 mm	87 mm	
Width	90 mm	90 mm	90 mm	
Depth	121 mm	121 mm	121 mm	
Weight	500 g	500 g	400 g	

Where standards are undated, the 2014-07 latest editions shall apply.

Safety characteristic data



NOTICE

You must comply with the safety-related characteristic data in order to achieve the required safety level for your plant/machine.

Operating mode	EN ISO 13849-1: 2008	EN ISO 13849-1: 2008	EN 62061 SIL CL	EN 62061 PFH _D [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008
	PL	Category					T _м [year]
_	PL e	Cat. 4	SIL CL 3	2,31E-09	SIL 3	2,03E-06	20

All the units used within a safety function must be considered when calculating the safety characteristic data.



INFORMATION

A safety function's SIL/PL values are **not** identical to the SIL/PL values of the units that are used and may be different. We recommend that you use the PAScal software tool to calculate the safety function's SIL/PL values.

Supplementary data




CAUTION!

It is essential to consider the relay's service life graphs. The relay outputs' safety-related characteristic data is only valid if the values in the service life graphs are met.

The PFH value depends on the switching frequency and the load on the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switching frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

Service life graph

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

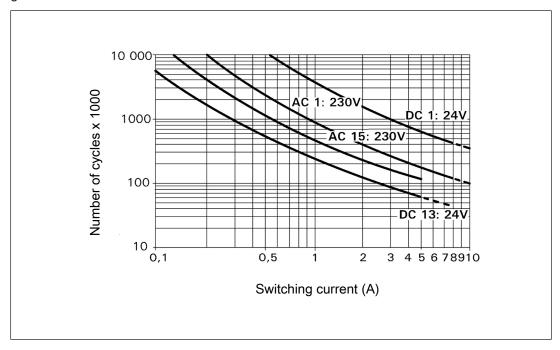

Example

Inductive load: 0.2 A

Utilisation category: AC15

Contact service life: 4 000 000 cycles

Provided the application to be implemented requires fewer than 4 000 000 cycles, the PFH value (see Technical details) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all output contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

Order reference

Product type	Features	Connection type	Order No.
PNOZ 1	24 VAC	Screw terminals	775 600
PNOZ 1	48 VAC	Screw terminals	775 620
PNOZ 1	110 – 120 VAC	Screw terminals	775 630
PNOZ 1	230 – 240 VAC	Screw terminals	775 650
PNOZ 1	24 VDC	Screw terminals	775 695

EC declaration of conformity

This product/these products meet the requirements of the directive 2006/42/EC for machinery of the European Parliament and of the Council. The complete EC Declaration of Conformity is available on the Internet at www.pilz.com/support/downloads. Representative: Norbert Fröhlich, Pilz GmbH & Co. KG, Felix-Wankel-Str. 2, 73760 Ostfildern, Germany

SafetyEYE®, SafetyNET p® THE SPIRIT OF SAFETY® are registered and protected trademarks of PIIZ GmbH & Co. KG in some countries. We would point out that product features mit from the details stated in this document, depending on the status at the time of publication and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information. Please contact our Technical Support if you have any questions.

InduraNET p°, PAS4000°, PAScale, PASconfig«, PIIz«, PIIz«, PIID«, PMCprimo«, PMCprotego«, PMCtendo«, PMD«, PMIe, PNOZ«, Primo«, PSEN», PSS«, PVIS«, SafetyBUS

Technical support is available from Pilz round the clock.

Americas
Brazil
+55 11 97569-2804
Canada
+1 888-315-PILZ (315-7459)
Mexico
+52 55 5572 1300
USA (toll-free)

+1 877-PILZUSA (745-9872)

Asia

China +86 21 60880878-216 Japan +81 45 471-2281 South Korea +82 31 450 0680

Australia

+61 3 95446300

Europe

Austria +43 1 7986263-0 Belgium, Luxembourg +32 9 3217575 France +33 3 88104000 Germany +49 711 3409-444 Ireland +353 21 4804983 Italy

+39 0362 1826711

Scandinavia +45 74436332 Spain +34 938497433 Switzerland +41 62 88979-30 The Netherlands +31 347 320477 Turkey +90 216 5775552

United Kingdom

+44 1536 462203


You can reach our international hotline on:

+49 711 3409-444 support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.





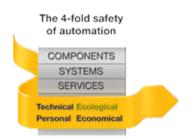





Pilz GmbH & Co. KG Felix-Wankel-Straße 2 73760 Ostfildern, Germany Tel.: +49 711 3409-0 Fax: +49 711 3409-133

info@pilz.com www.pilz.com

