FM


Model Number

NCB15-30GM40-N0-V1

Features

- 15 mm virtually flush
- Usable up to SIL2 acc. to IEC 61508

Connection

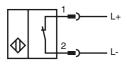

Wire colors in accordance with EN 60947-5-6

BN (brown) BU (blue)

Accessories

BF 30 Mounting flange, 30 mm


V1-G-N-2M-PUR

Cable socket, M12, 2-pin, NAMUR, PUR cable

V1-W-N-2M-PUR

Cable socket, M12, 2-pin, NAMUR, PUR cable

Dimensions

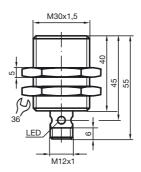

Technical Data

recillical Data		
General specifications		
Switching element function		NAMUR, NC
Rated operating distance	s _n	15 mm
Installation		virtually flush
Output polarity		NAMUR
Assured operating distance	sa	0 12.15 mm
Reduction factor r _{Al}		0.33
Reduction factor r _{Cu}		0.29
Reduction factor r ₃₀₄		0.76
Nominal ratings		
Nominal voltage	Uo	8 V
Switching frequency	f	0 450 Hz
Hysteresis	Н	1 15 typ. 5 %
Reverse polarity protected		reverse polarity protected
Short-circuit protection		yes
Current consumption		
Measuring plate not detected		≥ 2.2 mA
Measuring plate detected		≤ 1 mA
Indication of the switching state		Multihole-LED, yellow
Functional safety related parameter	ers	
MTTF _d		3068 a
Mission Time (T _M)		20 a
Diagnostic Coverage (DC)		0 %
Ambient conditions		
Ambient temperature		-25 100 °C (-13 212 °F)
Storage temperature		-40 100 °C (-40 212 °F)
Mechanical specifications		
Connection type		Device connector M12 x 1 , 4-pin
Core cross-section		•

Housing material Stainless steel 1.4305 / AISI 303 PBT

Sensing face
Protection degree IP67

General information

Use in the hazardous area see instruction manuals

1G; 2G; 3G; 3D Category

Compliance with standards and directives Standard conformity

EN 60947-5-6:2000 NAMUR IEC 60947-5-6:1999

NE 21:2007 Electromagnetic compatibility EN 60947-5-2:2007 IEC 60947-5-2:2007 Standards

Approvals and certificates

FM approval 116-0165F Control drawing

UL approval cULus Listed, General Purpose CSA approval cCSAus Listed, General Purpose


CCC approval Products with a maximum operating voltage of ≤36 V do not bear a

CCC marking because they do not require approval.

www.pepperl-fuchs.com

Installation hint

Installation conditions

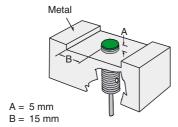

ATEX 1G

Instruction

Device category 1G

Directive conformity Standard conformity

CE symbol

General

Ex-identification

EC-Type Examination Certificate Appropriate type Effective internal capacitance Ci Effective internal inductance Li

Highest permissible ambient temperature

Installation, Comissioning

Maintenance

Special conditions

Protection from mechanical danger

Electrostatic charging

Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist 94/9/EG

EN 60079-0:2006, EN 60079-11:2007, EN 60079-26:2007 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions

C € 0102

⟨ II 1G Ex ia IIC T6

PTB 00 ATEX 2048 X

NCB15-30GM...-N0...

 \leq 120 nF; a cable length of 10 m is considered. \leq 150 μH ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data

sheet and in this instruction manual The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!

Directive 94/9/EG and hence also EC-Type Examination Certificates apply in general only to the use of electrical apparatus under atmospheric conditions

The use in ambient temperatures of > 60 °C was tested with regard to hot surfaces by the mentioned certification authority.

If the equipment is not used under atmospheric conditions, a reduction of the permissible minimum ignition energies may have to be taken into consideration.

The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate. Note: Use the temperature table for category 1 !!! The 20 % reduction in accordance with EN 1127-1:2007 has already been accounted for in the temperature table for category 1.

Laws and/or regulations and standards governing the use or intended usage goal must be observed.

The intrinsic safety is only assured in connection with an appropriate related

apparatus and according to the proof of intrinsic safety.

The associated apparatus must satisfy the requirements of category ia.

Due to the possible danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation of the power supply and signal circuit is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

When used in the temperature range below -20 $^{\circ}\text{C}$ the sensor should be protected from knocks by the provision of an additional housing.

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding. When used in group IIC non-permissible electrostatic charges should be avoided on the plastic housing

Pepperl+Fuchs Group

www.pepperl-fuchs.com

ATEX 2G

Instruction

Device category 2G

Directive conformity Standard conformity

CE symbol

General

Ex-identification

EC-Type Examination Certificate Appropriate type Effective internal capacitance Ci Effective internal inductance L

Highest permissible ambient temperature

Installation, Comissioning

Maintenance

Special conditions

Protection from mechanical danger

Electrostatic charging

Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist 94/9/EG

EN 60079-0:2006, EN 60079-11:2007 Ignition protection "Intrinsic safety"
Use is restricted to the following stated conditions **C**€0102

⟨Ex⟩ II 1G Ex ia IIC T6

PTB 00 ATEX 2048 X NCB15-30GM...-N0...

≤ 120 nF; a cable length of 10 m is considered.

 \leq 150 μH ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!

Directive 94/9/EG and hence also EC-Type Examination Certificates apply in general only to the use of electrical apparatus under atmospheric conditions

The use in ambient temperatures of > 60 °C was tested with regard to hot surfaces by the mentioned certification authority.

If the equipment is not used under atmospheric conditions, a reduction of the permissible minimum ignition energies may have to be taken into consideration.

The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

When used in the temperature range below -20 $^{\circ}\text{C}$ the sensor should be protected from knocks by the provision of an additional housing.

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

ATEX 3D

This instruction is only valid for products according to EN 50281-1-1, valid until 30-September-2008 Note

Note the ex-marking on the sensor or on the enclosed adhesive label

Manual electrical apparatus for hazardous areas Instruction

for use in hazardous areas with non-conducting combustible dust Device category 3D

Directive conformity 94/9/EG EN 50281-1-1 Standard conformity Protection via housing

Use is restricted to the following stated conditions

CE symbol **C**€0102

Ex-identification

 $\mbox{\fontfamily{\fontfamily{180}}}$ II 3D IP67 T 111 °C (231.8 °F) X The Ex-significant identification is on the enclosed adhesive label

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. General The data stated in the data sheet are restricted by this operating instruction! The special conditions must be adhered to!

Laws and/or regulations and standards governing the use or intended usage goal must be observed.

The adhesive label provided must be affixed in the immediate vicinity of the sensor! The surface to which the label is applied

must be clean, flat and free from grease!

The affixed adhesive label must be readable and durable, taking account of the possibility of chemical corrosion!

No changes can be made to apparatus, which are operated in hazardous areas.

Repairs to these apparatus are not possible.

Special conditions

Maintenance

Installation, Comissioning

Minimum series resistance R_V A minimum series resistance RV is to be provided between the power supply voltage and the proximity switch in accordance

with the following list. This can also be assured by using a switch amplifier.

Maximum operating voltage U_{Bmax} The maximum permissible operating voltage UBmax must be restricted to the values given in the following list. Tolerances

are not permitted.

Maximum heating (Temperature rise) Values can be obtained from the following list, depending on the max. operating voltage Ub max and the minimum series

resistance Rv.

11 K at U_{Bmax} =9 V, R_V =562 Ω using an amplifier in accordance with 11 K

Plug connector

The plug connector must not be disconnected under voltage. The proximity switch is marked as follows: "DO NOT DISCON-

NECT UNDER VOLTAGE!" When the plug connector is disconnected the ingress of dirt into the inner areas (i.e. the areas, which are not accessible in the plugged-in condition) must be prevented.

The plug connection can only be separated using a tool. This is achieved by using the locking protection V1-Clip (Mounting

accessory from Pepperl + Fuchs).

The sensor must not be mechanically damaged. Protection from mechanical danger

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding. Electrostatic charging

fa-info@us.pepperl-fuchs.com

www.pepperl-fuchs.com

Copyright Pepperl+Fuchs

Singapore: +65 6779 9091

fa-info@sg.pepperl-fuchs.com

ATEX 3D (tD)

Note

This instruction is only valid for products according to EN 61241-0:2006 and EN 61241-1:2004 Note the ex-marking on the sensor or on the enclosed adhesive label

Manual electrical apparatus for hazardous areas Instruction

Device category 3D for use in hazardous areas with non-conducting combustible dust

Directive conformity 94/9/EG

Standard conformity EN 61241-0:2006, EN 61241-1:2004

Protection via housing "tD"

Use is restricted to the following stated conditions

CE symbol **C** €0102

Ex-identification ⟨Ex⟩ II 3D Ex tD A22 IP67 T80°C X

The Ex-relevant identification may also be printed on the accompanying adhesive label.

General The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The maximum surface temperature has been determined in accordance with method A without a dust layer on the equip-

ment

The data stated in the data sheet are restricted by this operating instruction!

The special conditions must be adhered to!

The statutory requirements, directives and standards applicable to the intended use and application must be observed. Installation, Comissioning

The adhesive label provided must be affixed in the immediate vicinity of the sensor! The surface to which the label is applied

must be clean, flat and free from grease!

The affixed adhesive label must be readable and durable, taking account of the possibility of chemical corrosion!

Maintenance No changes can be made to apparatus, which are operated in hazardous areas.

Repairs to these apparatus are not possible.

Special conditions

A minimum series resistance RV is to be provided between the power supply voltage and the proximity switch in accordance Minimum series resistance R_V

with the following list. This can also be assured by using a switch amplifier.

Maximum operating voltage U_{Bmax} The maximum permissible operating voltage UBmax must be restricted to the values given in the following list. Tolerances

are not permitted

Maximum permissible ambient temperature T_{Umax}

Values can be obtained from the following list, depending on the max. operating voltage Ub max and the minimum series resistance Rv.

at U_{Bmax} =9 V, R_V =562 Ω 58 °C (136.4 °F) using an amplifier in accordance with 58 °C (136.4 °F)

EN 60947-5-6

The plug connector must not be withdrawn under voltage. The proximity switch is identified as follows: "WARNING - DO NOT Plug connector

SEPARATE WHEN ENERGIZED". With the plug connector disconnected, soiling of the internal area must be prevented.(i.e. the area that is inaccessible when the connector is inserted) The plug connection can only be separated using a tool. This is

achieved by using the locking protection V1-Clip (Mounting accessory from Pepperl + Fuchs).

Protection from mechanical danger

The sensor must not be exposed to ANY FORM of mechanical danger.

The sensor and the connection cable must be protected from damaging UV-radiation. This can be achieved when the sensor Protection from UV light

is used in internal areas.

Electrostatic charging Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the

mechanical housing components can be avoided by incorporating these in the equipotential bonding.

ATEX 3G (nL)

Instruction

Device category 3G (nL)

Directive conformity
Standard conformity

CE symbol

Ex-identification

Effective internal capacitance C_i Effective internal inductance L_i

General

Installation, Comissioning

Maintenance

Special conditions

Maximum permissible ambient temperature T_{Umax} at Ui = 20 V

for Pi=34 mW, Ii=25 mA, T6
for Pi=34 mW, Ii=25 mA, T5
for Pi=34 mW, Ii=25 mA, T4-T1
for Pi=64 mW, Ii=25 mA, T6
for Pi=64 mW, Ii=25 mA, T5
for Pi=64 mW, Ii=25 mA, T4-T1
for Pi=169 mW, Ii=52 mA, T6
for Pi=169 mW, Ii=52 mA, T5
for Pi=169 mW, Ii=52 mA, T4-T1
for Pi=242 mW, Ii=76 mA, T6
for Pi=242 mW, Ii=76 mA, T5
for Pi=242 mW, Ii=76 mA, T5
for Pi=242 mW, Ii=76 mA, T5

Protection from mechanical danger

Protection from UV light

Electrostatic charging

Protection of the connection cable

Connection parts

Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist 94/9/EG

EN 60079-15:2005 Ignition protection category "n" Use is restricted to the following stated conditions

C€0102

(x) II 3G Ex nL IIC T6 X The Ex-significant identification is on the enclosed adhesive label

 \leq 120 nF; a cable length of 10 m is considered.

 \leq 150 μH ; A cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The data stated in the data sheet are restricted by this operating instruction!

The special conditions must be observed!

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The sensor must only be operated with an energy-limited circuit, which satisfies the requirements of IEC 60079-15. The explosion group complies with the connected, supplying, power limiting circuit. The adhesive label provided must be affixed in the immediate vicinity of the sensor! The surface to which the label is applied must be clean, flat and free from grease!

The affixed adhesive label must be readable and durable, taking account of the possibility of chemical corrosion!

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

55 °C (131 °F)
41 °C (105.8 °F)
41 °C (105.8 °F)
41 °C (105.8 °F)
29 °C (84.2 °F)
29 °C (84.2 °F)
29 °C (84.2 °F)

The sensor must not be exposed to **ANY FORM** of mechanical danger. When used in the temperature range below -20 $^{\circ}$ C the sensor should be protected from knocks by the provision of an additional housing.

The sensor and the connection cable must be protected from damaging UV-radiation. This can be achieved when the sensor is used in internal areas.

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

The connection cable must be prevented from being subjected to tension and torsional loading.

The connection parts are to be installed, such that a minimum protection class of IP20 is achieved, in accordance with IEC 60529.

www.pepperl-fuchs.com

ATEX 3G (ic)

Instruction

Device category 3G (ic)

Directive conformity Standard conformity

CE symbol

Ex-identification

Effective internal capacitance Ci Effective internal inductance L

General

Installation, Comissioning

Maintenance

Special conditions

Maximum permissible ambient temperature T_{Umax} at Ui = 20 V for Pi=34 mW, Ii=25 mA, T6 for Pi=34 mW, Ii=25 mA, T5 for Pi=34 mW, Ii=25 mA, T4-T1 for Pi=64 mW, Ii=25 mA, T6 for Pi=64 mW, Ii=25 mA, T5 for Pi=64 mW, Ii=25 mA, T4-T1 for Pi=169 mW, Ii=52 mA, T6 for Pi=169 mW, Ii=52 mA, T5 for Pi=169 mW, Ii=52 mA, T4-T1 for Pi=242 mW, Ii=76 mA, T6 for Pi=242 mW. Ii=76 mA. T5

Electrostatic charging

for Pi=242 mW, Ii=76 mA, T4-T1

Protection from mechanical danger

Connection parts

Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist 94/9/EG

EN 60079-11:2007 Ignition protection category "ic" Use is restricted to the following stated conditions

(€

(x) II 3G Ex ic IIC T6 X The Ex-significant identification is on the enclosed adhesive

≤ 120 nF; a cable length of 10 m is considered. ≤ 150 µH; A cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The data stated in the data sheet are restricted by this operating instruction!

The special conditions must be observed!

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The sensor must only be operated with energy-limited circuits, which satisfy the requirements of IEC 60079-11. The explosion group depends on the connected and energy-limited supply circuit.

The adhesive label provided must be affixed in the immediate vicinity of the sensor! The surface to which the label is applied must be clean, flat and free from grease! The affixed adhesive label must be readable and durable, taking account of the

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

55 °C (131 °F) 41 °C (105.8 °F) 41 °C (105.8 °F) 41 °C (105.8 °F) 29 °C (84.2 °F) 29 °C (84.2 °F) 29 °C (84.2 °F)

The sensor must not be mechanically damaged.

When used in the temperature range below -20 °C the sensor should be protected from knocks by the provision of an additional housing.

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

The connection parts are to be installed, such that a minimum protection class of

IP20 is achieved, in accordance with IEC 60529.

8