








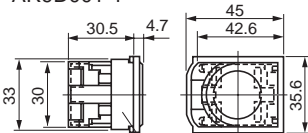
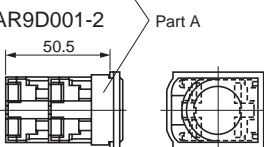
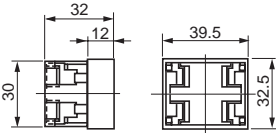





Pushbuttons/Selectors/Pilot Lights

AR22/DR22 and AR30/DR30

Accessories

Description	Type		
Incandescent lamp 	Type	Lamp voltage	Rated voltage, consumption
	AHX135	5.5V AC/DC	6.3V AC/DC, 1W
	AHX279	15V AC/DC	18V AC/DC, 1W
	AHX144	20V AC/DC	24V AC/DC, 1W
	AHX129	24V AC/DC	30V AC/DC, 1W
Dimensions, mm:  Lamp base: BA9s/13			
AF89-427			
Incandescent lamp (for DR30 with resistor) 	Type	Lamp voltage	Rated voltage, consumption
	AHX130	15V AC/DC	18V AC/DC, 2W
Dimensions, mm:  Lamp base: E12/15			
KK02-115A			
Contact block (1NO) 	AR9B290 AR9B290-S	Standard Overlap	
AF94-455	Color: Blue Dimensions, mm: 19.3 x 29 x 27 Note: Terminal cover is not supplied with this.		
Contact block (1NC) 	AR9B291 AR9B291-S	Standard Overlap	
AF94-455	Color: Red Dimensions, mm: 19.3 x 29 x 27 Note: Terminal cover is not supplied with this.		
Lamp terminal 	AR9B292		
AF94-456	Color: Black Dimensions, mm: 19.3 x 29 x 27 Note: Terminal cover is not supplied with this.		

Description	Type																																						
<div>Contact protection cover</div> <div><p>KK02-117A</p><p>KK02-118A</p></div>	<table><tr><th>Type</th><th>Used with *</th></tr><tr><td>AR9D001-1</td><td>AR22, 1-step contact</td></tr><tr><td>AR9D001-2</td><td>AR22, 2-step contact</td></tr><tr><td>AR9D002-1</td><td>AR30, 1-step contact</td></tr><tr><td>AR9D002-2</td><td>AR30, 2-step contact</td></tr></table> <div>• The contact is covered with a silicon rubber cover to keep out foreign matter such as dust, etc.</div> <div>• Section A of the AR9D001 is separate.</div> <div>* See page 04/122, “AR22 □ Z8, AR30 □ Z8”</div> <div>Dimensions, mm:</div> <div><div><div>AR9D001-1</div></div><div><div>AR9D001-2</div></div><div><div>AR9D002-1</div></div><div><div>AR9D002-2</div></div></div>	Type	Used with *	AR9D001-1	AR22, 1-step contact	AR9D001-2	AR22, 2-step contact	AR9D002-1	AR30, 1-step contact	AR9D002-2	AR30, 2-step contact																												
	Type	Used with *																																					
	AR9D001-1	AR22, 1-step contact																																					
	AR9D001-2	AR22, 2-step contact																																					
	AR9D002-1	AR30, 1-step contact																																					
	AR9D002-2	AR30, 2-step contact																																					
	<div>Transformer unit</div> <div><p>AF94-457</p><p>AF95-33</p></div>	<table><tr><th>Type</th><th>Primary voltage</th><th>Used with</th></tr><tr><td>AR9T511-H</td><td>100-110V AC</td><td rowspan="5">Standard type (except buzzers)</td></tr><tr><td>AR9T511-L</td><td>115-127V AC</td></tr><tr><td>AR9T511-M</td><td>200-220V AC</td></tr><tr><td>AR9T511-Q</td><td>230-254V AC</td></tr><tr><td>AR9T511-S</td><td>350-380V AC</td></tr><tr><td>AR9T511-T</td><td>400-440V AC</td><td rowspan="11">DR30F4N, F4M, M4M</td></tr><tr><td>AR9T511-V</td><td>480V AC</td></tr><tr><td>AR9T511-W</td><td>500-550V AC</td></tr><tr><td>AR9T557-H</td><td>100-110V AC</td></tr><tr><td>AR9T557-L</td><td>115-127V AC</td></tr><tr><td>AR9T557-M</td><td>200-220V AC</td></tr><tr><td>AR9T557-Q</td><td>230-254V AC</td></tr><tr><td>AR9T557-S</td><td>350-380V AC</td></tr><tr><td>AR9T557-T</td><td>400-440V AC</td></tr><tr><td>AR9T557-V</td><td>480V AC</td></tr><tr><td>AR9T557-W</td><td>500-550V AC</td></tr></table> <div>Dimensions, mm:</div> <div>Up to 220 V 22.4 x 30 x 45</div> <div>Over 220 V 25.3 x 29 x 48</div> <div>Note: With terminal cover</div>	Type	Primary voltage	Used with	AR9T511-H	100-110V AC	Standard type (except buzzers)	AR9T511-L	115-127V AC	AR9T511-M	200-220V AC	AR9T511-Q	230-254V AC	AR9T511-S	350-380V AC	AR9T511-T	400-440V AC	DR30F4N, F4M, M4M	AR9T511-V	480V AC	AR9T511-W	500-550V AC	AR9T557-H	100-110V AC	AR9T557-L	115-127V AC	AR9T557-M	200-220V AC	AR9T557-Q	230-254V AC	AR9T557-S	350-380V AC	AR9T557-T	400-440V AC	AR9T557-V	480V AC	AR9T557-W	500-550V AC
	Type	Primary voltage	Used with																																				
	AR9T511-H	100-110V AC	Standard type (except buzzers)																																				
	AR9T511-L	115-127V AC																																					
AR9T511-M	200-220V AC																																						
AR9T511-Q	230-254V AC																																						
AR9T511-S	350-380V AC																																						
AR9T511-T	400-440V AC	DR30F4N, F4M, M4M																																					
AR9T511-V	480V AC																																						
AR9T511-W	500-550V AC																																						
AR9T557-H	100-110V AC																																						
AR9T557-L	115-127V AC																																						
AR9T557-M	200-220V AC																																						
AR9T557-Q	230-254V AC																																						
AR9T557-S	350-380V AC																																						
AR9T557-T	400-440V AC																																						
AR9T557-V	480V AC																																						
AR9T557-W	500-550V AC																																						