

# Honeywell

## NORTH<sup>®</sup>



### SuperOne Series

EN Filtering half-mask



EN

See information supplied by the manufacturer	End of shelf life	Temperature range of storage conditions	Maximum relative humidity of storage conditions	Recycle after end of life	Warning	Not suitable for food	Recyclable cardboard
--	-------------------	---	---	---------------------------	---------	-----------------------	----------------------

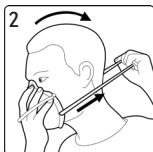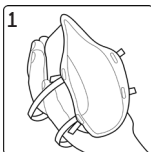

**APPLICATIONS:** Filtering half-masks classified FFP1, FFP2 or FFP3 against solid and liquid aerosols in concentrations up to Protection Factor x WEL (Workplace Exposure Limit): 4 x WEL: FFP1 class (low toxicity), 12 [10 in UK, FIN, D, I, S] x WEL: FFP2 class (average toxicity), 50 [20 in FIN, S, UK & 30 D, I] x WEL: FFP3 class (high toxicity). « D » marked for passing the dolomite clogging test. « NR » (single-shift use) or « R » (Re-useable) marked according to the amended standard EN149:2001 +A1:2009.

**LIMITATIONS:** Do NOT use this mask to enter or stay in an area where:

- oxygen concentration is less than 17% (oxygen-deficient atmospheres)
- contaminants and/or their concentrations are unknown or immediately dangerous to life or health
- aerosol concentration exceeds levels fixed by applicable health and safety regulations or Protection Factor xWEL
- gases and/or vapours are present. Do NOT use this mask in explosive atmospheres, except for references supplied with a Declaration of Conformity. Do not use before receiving training.

**CHECKING BEFORE USE:** The user shall ensure that the mask is suitable for the intended application before entering the contaminated area.

**WEARING AND ADJUSTMENT:**

- 1 – Cup the mask in the hand, the headbands downward.
- 2 – Place the mask under the chin. Place the lower headband around the neck, below the ears.
- 3 – Holding the mask against the face with one hand, place the top headband above the ears, around the crown of the head.
- 4 – CHECK FOR LEAK-TIGHTNESS AS FOLLOWS:
  - place both hands over the mask and – exhale sharply for a mask without exhalation valve – inhale deeply for a mask with exhalation valve
  - if you feel air leaks around the edges, readjust the mask by increasing tension of the headbands (by tying a knot)
  - repeat the procedure until satisfactory face-fit has been achieved. N.B.: requirements

for leak-tightness are unlikely to be achieved if the respirator is worn against a beard or facial stubble.

**USING:** Taking a new mask from its box.

- 1 – Check the condition of the mask before use.
- 2 – Fit the mask and check leak-tightness before entering the contaminated area.
- 3 – Wear it for the whole duration of exposure to contaminants.
- 4 – Discard it and replace with a new one if:
  - it is removed while in a contaminated area
  - excessive clogging causes breathing difficulty or discomfort
  - it becomes damaged
  - for masks offering relief against nuisance odours, the smell becomes detectable. Do not alter the mask. Leave the contaminated area if dizziness, irritation or other distress occurs.

**WARNING:** The mask shall not be used for more than one shift if it is for single-shift use (« NR »). Keep unused masks in their closed box and store in a non-contaminated area.

**CLEANING:** Applicable only on the re-useable masks (« R »). If the mask is to be used for more than one shift, the face seal must be cleaned with a wipe impregnated with a cleaning and disinfecting solution, without alcohol. Products comply with the European Parliament and Council Regulation (EU) 2016/425 for Personal Protective Equipment and subsequent amendments. EU-type examination certificate and Quality assessment following module D by APAVE SUDEUROPE SAS - CS60193 - 13322 MARSEILLE Cedex 16 - FRANCE. Notified Body No. 0082. EU-type examination certificate issued to: "HONEYWELL RESPIRATORY SAFETY PRODUCTS". The EU declaration of conformity is available on the website <https://doc.honeywellsafety.com/>.

Sort out your waste by respecting the regulations in force.

#### HONEYWELL RESPIRATORY SAFETY PRODUCTS

C.S. 55288 - 95958 ROISSY CDG Cedex - ZI PARIS NORD II - 33, rue des Vanesses

VILLEPINTE - FRANCE

Phone: +33 (0)1 49 90 79 79

[www.honeywellsafety.com](http://www.honeywellsafety.com)

CE0082 EAC