

hohner Hohner Automation Ltd.

[Home](#)[Email](#)[Distributors](#)[Terms](#)[About Us](#)[Accessories](#)[Download 3D AutoCAD](#)

Series 14 incremental hollow shaft encoder up to 40 mm (non intrinsically safe part number)



1 4 X X X X X / X X X X
 Shaft Size Output Signal Output Circuit Connection RESOLUTION
 Up to 3000 ppr max

XX Shaft Size

12 = 12 mm
 14 = 14 mm
 25 = 25 mm
 40 = 40 mm.....you get the picture.....
 AA = 1"
 OA = 5/8"
 OB = 3/4"
 OC = 7/8"
 OD = 1 - 1/8"

XX Output Signal

31 = channel A
 32 = channel A and B
 33 = channel A, B and O
 34 = channel A and A comp
 35 = channel A & B and A & B comp
 36 = all six channels

X Output Circuit

2 = 5V TTL
 7 = Current Sink / Open Collector 5-24 V
 9 = Extended Line Driver 5-24 V

X Connection

4 = 9512, 12 pin plug & socket
 D = 9 pole D
 R = 2 m cable
 F = 3 m cable
 H = 4 m cable
 J = 5 m cable
 L = 8 m cable

Technical Data


Operating temp: - 20 ...+ 60 degrees C
 - 4 ...+ 140 degrees F
 On request: -20 ... + 80 degrees C
 Max frequency: 150 kHz
 Current consumption: 90 mA (max.)
 Power supply: 5 - 24V
 Weight: 21 oz (0.6 kg)
 Protection: IP 64S, NEMA 3
 Housing: Aluminum
 Shaft: Aluminum
 Bearings: 2 x 6810 ZZ C2
 Torque: 0.4 oz/in (3 N-cm)

Connection Options

	9 pole	Cable	12 pin
PS GND	1	Black	1
PS 5 ... 24 V	2	Red	2
Output A	3	White	3
Output B	4	Blue	4
Output O	5	Yellow	5
Output A inv	6	Green	6
Output B inv	7	Violet	7
Output O inv	8	Brown	8

Output

Diagram is shown with clockwise shaft rotation viewed from

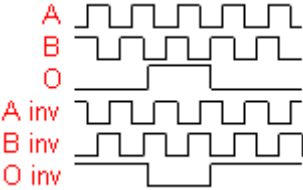
25/09/2020	250106 - Series 14 incremental hollow shaft encoder up to 40 mm (old part number)	
Humidity:	Up to 98% permissible	opposite side to shaft grub screws
Speed:	3000 RPM max.	
Shock:	10g (6msec)	
Vibration:	5g (500 Hz)	
Shaft load:	Supports its own weight	
Line driver output max:	50 mA per channel	
Max. ppr	3000	

Mounting Instructions

Mount fixture to the machine with three screws and three washers, M6 or 1/4". Slide the encoder onto the shaft. With the setscrews, tighten the hollow shaft encoder onto the shaft with a minimum clearance of 1/16" between fixture and encoder. This assembly allows the shaft to float and increases the lifetime of the bearings. Connect the encoder as per wiring specifications. Make sure power supply is within the proper voltage and current rating. Encoder can be mounted with the setscrew on the machine side or on the opposite side for either CW or CCW. See datasheet for CW and CCW directions of the outputs.

Technical data for mount: 1/8" stainless steel wire

Dimensions

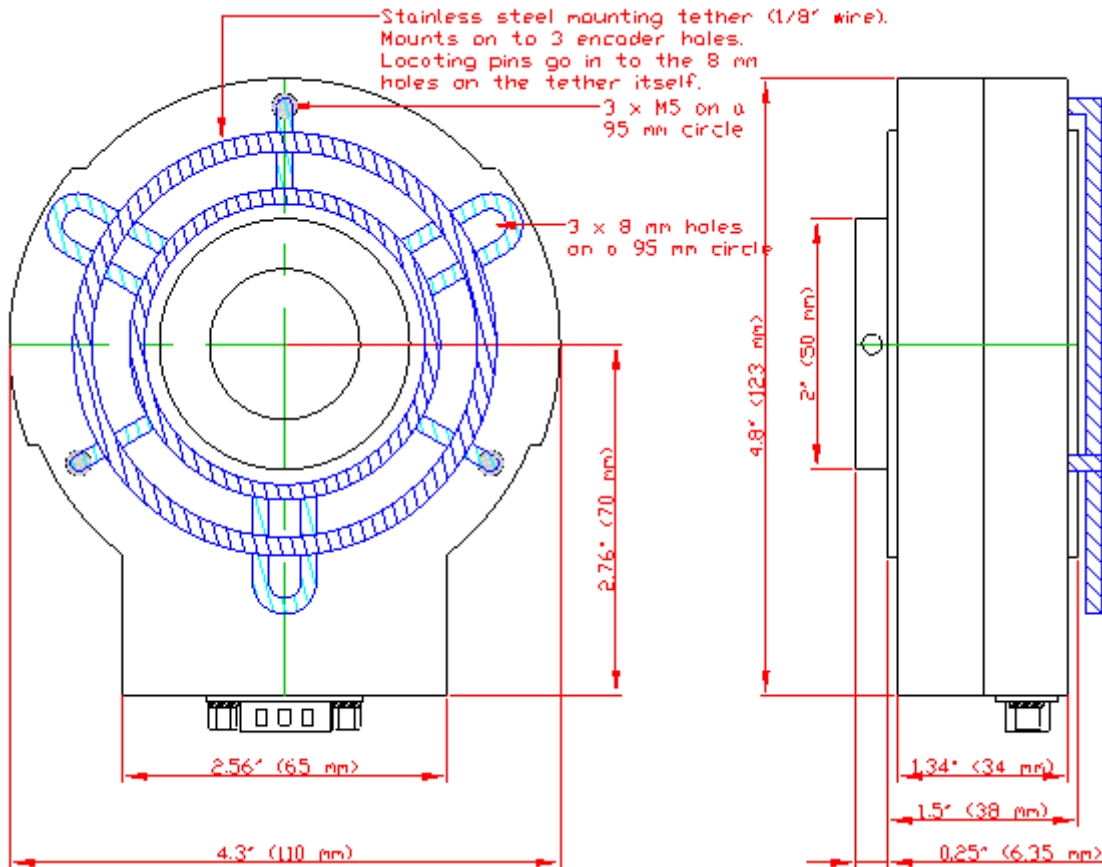

Hohner Automation Ltd.
Whitegate Industrial Estate
Wrexham LL13 8UG
United Kingdom

Tel: +44 (0) 1978 363-888
Fax: +44 (0) 1978 364-586
E-mail: uksales@hohner.com
Web: www.hohneronline.co.uk