


Terminal blocks for auxiliary circuit

- It indicates the terminal No. of internal accessory. The connection method of internal accessory is lead-wire system and terminal block system.
- For the available configuration of internal accessory, see page 07/62.

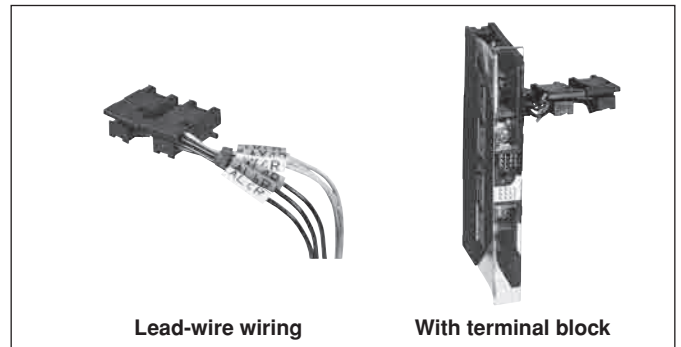

Terminal number of internal accessory

| Accessory | | 32 – 250AF | | 400 – 800AF |
|-----------------------------------|---|--------------------|---------------------|--------------------|
| | | Left side mounting | Right side mounting | Left side mounting |
| Auxiliary switch | SPDT: W (1)* | | | |
| | 2PDT: V (2)* | | | |
| Alarm switch | SPDT: K (8)* | | | |
| | 2PDT: J (9)* | | | |
| Shunt trip device : F | With 1NO contact to prevent coil burn-out | | | — |
| | Continuous rating | — | | |
| Undervoltage trip device : R | | | | |
| Earth alarm switch (125 to 800AF) | | | | |

Note: * () Code of Low level circuit

Earth Leakage Circuit Breakers

G-TWIN series

Internal accessories

Available configurations



| ECCB | EW32AAG-2P EW50AAG-2P | EW32□-3P EW50□-3P EW63□-3P EW100□-2P EW100□-3P | EW125 EW160 EW250 | EW400 EW630 EW800 | |
|----------------------------------|--------------------------|--|-------------------------|-------------------------|------|
| Pole | 2 | 2, 3 | 3 | 4 | 3, 4 |
| Auxiliary switch SPDT: W (1)* | | | | | |
| Alarm switch SPDT: K (8)* | | | | | |
| Shunt trip: F | | | | | |
| Undervoltage trip: R | | | | | |
| W+K (1+8) | | | | | |
| Auxiliary switch 2PDT: V (2) | | | | | |
| Alarm switch 2PDT: J (9) | | | | | |
| V+K (2+8) | | | | | |
| W+J (1+9) | | | | | |
| V+J (2+9) | | | | | |
| W+F (1+F) | | | | | |
| W+R (1+R) | | | | | |
| K+F (8+F) | | | | | |
| K+R (8+R) | | | | | |
| W+K+F (1+8+F) | | | | | |
| W+K+R (1+8+R) | | | | | |
| V+F (2+F) | | | | | |
| V+R (2+R) | | | | | |
| J+F (9+F) | | | | | |
| J+R (9+R) | | | | | |
| V+K+F (2+8+F) | | | | | |
| V+K+R (2+8+R) | | | | | |
| W+J+F (1+9+F) | | | | | |
| W+J+R (1+9+R) | | | | | |
| V+J+F (2+9+F) | | | | | |
| V+J+R (2+9+R) | | | | | |
| L | | | | | |

Notes: •The above table is applied to front mounting type, rear mounting type, flush mounting type, and plug-in mounting type.
 • Terminal block is attached on the same side of the accessory.
 • () Code of low level circuit □:See page 07/2.

■ Operation of auxiliary switches(W) and alarm switches(K)

| Accessory | Handle position | | Trip | |
|------------------|--|-----|------|--|
| | ON | OFF | | |
| Auxiliary switch | <div style="display: flex; justify-content: space-between;"> <div style="width: 45%;"> <p>SPDT: W (1)</p> </div> <div style="width: 45%;"> <p>OFF</p> </div> </div> | | | |
| | <div style="display: flex; justify-content: space-between;"> <div style="width: 45%;"> <p>2PDT: V (2)</p> </div> <div style="width: 45%;"> <p>OFF</p> </div> </div> | | | |
| Alarm switch | <div style="display: flex; justify-content: space-between;"> <div style="width: 45%;"> <p>SPDT: K (8)</p> </div> <div style="width: 45%;"> <p>OFF</p> </div> </div> | | | |
| | <div style="display: flex; justify-content: space-between;"> <div style="width: 45%;"> <p>2PDT: J (9)</p> </div> <div style="width: 45%;"> <p>OFF</p> </div> </div> | | | |

Note: □ Ring mark indication
() Code of low level circuit

■ Operation of earth alarm switch (L)

| Accessory | Handle position | | EL trip |
|--------------------|-------------------------|--|---------|
| | ON/OFF/Overcurrent trip | | |
| Earth alarm switch | L | | |

■ Ratings of auxiliary switches(W) and alarm switches(K)

• 32-100AF

| | IEC60947-5-1 | | | NECA C4505 | | Minimum load current |
|-------------------|--------------|------------------------|-------|-------------|------------------------|----------------------------|
| | Voltage (V) | Make/break current (A) | | Voltage (V) | Make/break current (A) | |
| | | AC 15 | DC 13 | | | |
| Standard type | 125 AC | 5 | - | 125 AC | 5 | 5V DC 160mA 30V DC 30mA |
| | 250 AC | 5 | - | 250 AC | 3 | |
| | - | - | - | 30 DC | 4 | |
| | 125 DC | - | 0.6 | 125 DC | 0.4 | |
| Low level circuit | 250 DC | - | 0.3 | 250 DC | 0.2 | 5V DC 1mA |
| | - | - | - | 30 DC | 0.1 | |

• 125-800AF

| | Rated thermal current (A) | Rated operational current (A) | | | | | | Minimum load current |
|-------------------|---------------------------|-------------------------------|-----------|-----------|-------------------------------|-----------|-----------|----------------------------|
| | | AC | | | DC | | | |
| | | Rated operational Voltage (V) | Res. load | Ind. load | Rated operational Voltage (V) | Res. load | Ind. load | |
| Standard type | 5 | 24 | 5 | 5 | 24 | 4 | 3 | 5V DC 160mA 30V DC 30mA |
| | | 48 | 5 | 5 | 48 | 2.5 | 1 | |
| | | 125 | 5 | 3 | 125 | 0.4 | 0.4 | |
| | | 250 | 3 | 2 | 250 | 0.2 | 0.2 | |
| Low level circuit | 0.1 | 30 | 0.1 | - | 30 | 0.1 | - | 5V DC 1mA |

Earth Leakage Circuit Breakers

G-TWIN series

Internal accessories

■ Rating of shunt trip (F)

| ELCB type | Installation | AC | | DC | | Code | Time rating of coil | Opening time (ms) |
|---|--------------|-----------------------------|----|-------------|----|----------------------------------|---|-------------------|
| | | V | VA | V | W | | | |
| EW32 EW50 EW63 EW100 | External | 100(50Hz)/ 100-110(60Hz) | 16 | – | – | FAC100V(50Hz)/ 100-110V(60Hz) | Continuous | 7-13 |
| | | 200(50Hz)/ 200-220(60Hz) | 16 | – | – | FAC200V(50Hz)/ 200-220V(60Hz) | | |
| | | 400(50Hz)/ 400-440(60Hz) | 22 | – | – | FAC400V(50Hz)/ 400-440V(60Hz) | | |
| | | – | – | 24 | 36 | DC24V | | |
| | | – | – | 100-110 | 23 | FDC100-110V | | |
| EW125 EW160 EW250 | Internal | 24 | 50 | 24 | 50 | FAC/DC24V | Continuous (With 1NO contact to prevent coil burn-out) | 13-21 |
| | | 48 | 50 | 48 | 50 | FAC/DC48V | | |
| | | 100-120 | 50 | 100-110 | 50 | FAC100-120V/ DC100-110V | | |
| | | 120-130 | 50 | – | – | FAC120-130V | | |
| | | 200-240 | 50 | 200-220 | 50 | FAC200-240V/ DC200-220V | | |
| | | 277 | 50 | – | – | FAC277V | | |
| | | 380-440 | 50 | – | – | FAC380-440V | | |
| | | 440-480 | 50 | – | – | FAC440-480V | | |
| 500-550 | 50 | – | – | FAC500-550V | | | | |
| EW400 EW630 EW800 | Internal | 24-48 | 2 | 24-48 | 2 | FAC/DC24-48V | Continuous | 8-20 |
| | | 100-240 | 3 | 100-220 | 3 | FAC100-240V/ DC100-220V | | |
| | | 277 | 3 | – | – | FAC277V | | |
| | | 380-550 | 4 | – | – | FAC380-550V | | |

Note: The operating tripping voltage range for shunt trip devices is 70% to 110% of the rated operating voltage.

■ Rating of undervoltage trip (R)

| ELCB type | Installation | AC | | DC | | Code |
|---|--------------|-------------------------------|-----|---------|----|----------------------------------|
| | | V | VA | V | W | |
| EW32 *2 EW50 *2 EW63 *2 EW100 *2 | External | 100 (50Hz)/ 100-110(60Hz) | 2.8 | – | – | RAC100V(50Hz)/ 100-110V(60Hz) |
| | | 200 (50Hz)/ 200-220 (60Hz) | 3.4 | – | – | RAC200V(50Hz)/ 200-220V(60Hz) |
| | | 400 (50Hz)/ 400-440 (60Hz) | 4.4 | – | – | RAC400V(50Hz)/ 400-440V(60Hz) |
| | | – | – | 24 | 40 | RDC24V |
| | | – | – | 100-110 | – | RDC100-110V |
| EW125 *1 EW160 *1 EW250 *1 | Internal | – | – | 24 | 5 | RDC24V |
| | | – | – | 48 | 5 | RDC48V |
| | | – | – | 100-110 | 5 | RDC100-110V |
| | | – | – | 125 | 5 | RDC125V |
| | | 100-110 | 5 | – | – | RAC100-110V |
| | | 110-130 | 5 | – | – | RAC110V-130V |
| | | 200-240 | 5 | – | – | RAC200-240V |
| | | 277 | 5 | – | – | RAC277V |
| | | 380-415 | 5 | – | – | RAC380-415V |
| | | 440-480 | 5 | – | – | RAC440V-480V |
| EW400 *2 EW630 *2 EW800 *2 | Internal | 24 | 2 | 24 | 2 | RAC/DC24V |
| | | 48 | 2 | 48 | 2 | RAC/DC48V |
| | | 100-110 | 3 | 100-110 | 3 | RAC/DC100-110V |
| | | 120-130 | 3 | 125 | 3 | RAC120-130V/DC125V |
| | | 200-240 | 3 | 200-220 | 3 | RAC200-240V/DC200-220V |
| | | 277 | 3 | – | – | RAC277V |
| | | 380-480 | 4 | – | – | RAC380-480V |

Notes: • The operating voltages of undervoltage tripping devices are as follows:

Tripping voltage: 35% to 70% of rated voltage, closing voltage: 85% to 110% of rated voltage.

*1 Reset-allowed type: When the breaker handle is in the OFF or RESET state, tripping does not occur even if the R coil is not energized. Turning ON with the R coil not energized causes normal tripping.

*2 Reset-prohibited type: When the R coil is not energized, reset operation cannot reset the tripped breaker to the OFF state.

Earth Leakage Circuit Breakers

G-TWIN series

Internal accessories



Lead wire specification

| AF | Pole | wire size | Wire length |
|--------------|----------|----------------------------|-----------------|
| 32 to 100AF | Standard | 0.4mm ² (AWG22) | Ca 500mm |
| | Global | 0.5mm ² (AWG20) | |
| 125 to 250AF | 2P, 3P | 0.5mm ² (AWG20) | |
| | 4P | | |
| 400 to 800AF | 2P, 3P | 0.5mm ² (AWG20) | Ca 500mm |
| | 4P | | Ca 400 to 450mm |


Terminal blocks

32AF, 50AF, 63AF, 100AF

125AF, 160AF, 250AF

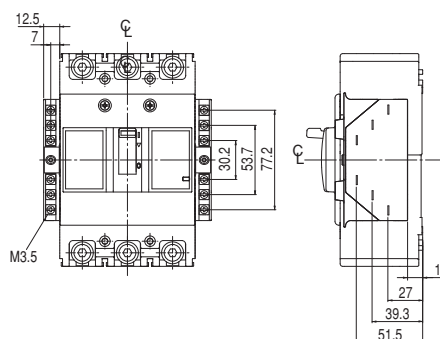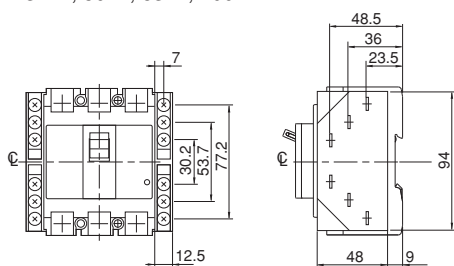


400AF, 630AF, 800AF

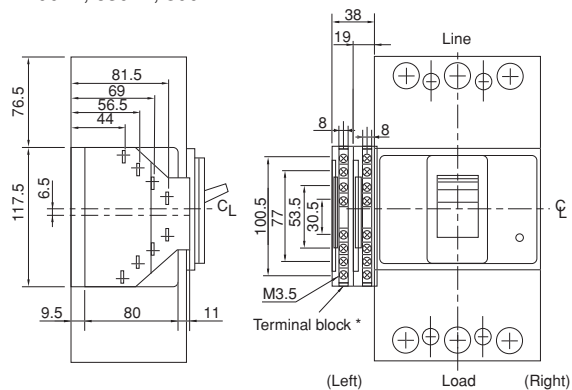

- Notes:
- * If the chosen combination has more than 8 terminals, 2 terminal blocks are mounted.
 - Mount the terminal block on the surface on which the accessories are mounted.
 - See the table of the combinations of internal accessories on pages XX. for information on the accessory mounting position.
 - Available wire: Solid wire: 1.6ø Stranded wire: 2mm²
 - Terminal blocks are available as factory mounted only.

Undervoltage trip device, Shunt trip device

32AF, 50AF, 63AF, 100AF

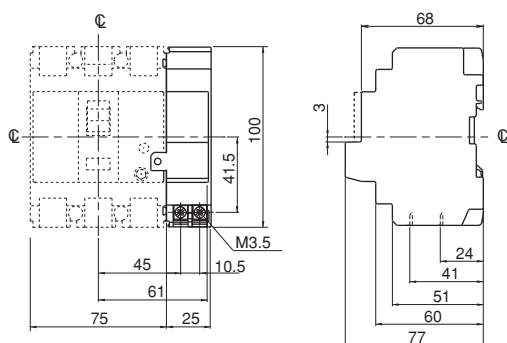

Mass: 0.15kg

Earth Leakage Circuit Breakers

G-TWIN series

Internal accessories

■ Type number

Internal accessories (Sold separately)

• 32, 50, 63, 100AF IEC/EN/GB/JIS conformed

| Accessory | Type | | | | Operating voltage | | | | | |
|---|--------------------|-------------------------------|-----------------------|---------------------|-------------------|-------------------------------|-------------------------------|--|-----------------|-------------------------------|
| | Lead wire system | | Terminal block system | | | | | | | |
| | Left side | Right side | Left side | Right side | | | | | | |
| Auxiliary switch | BZ6WL10C | BZ6WR10C | BZ6WL10CA | BZ6WR10CA | / | | | | | |
| Auxiliary switch (low level circuit) | BZ6WDL10C | BZ6WDR10C | BZ6WDL10CA | BZ6WDR10CA | | | | | | |
| Alarm switch | BZ6KL10C | BZ6KR10C | BZ6KL10CA | BZ6KR10CA | | | | | | |
| Alarm switch (low level circuit) | BZ6KDL10C | BZ6KDR10C | BZ6KDL10CA | BZ6KDR10CA | | | | | | |
| Auxiliary switch + Alarm switch | BZ6WKL10C | BZ6WKR10C | BZ6WKL10CA | BZ6WKR10CA | | | | | | |
| Auxiliary switch + Alarm switch (low level circuit) | BZ6WDKDL10C | BZ6WDKDR10C | BZ6WDKDL10CA | BZ6WDKDR10CA | | | | | | |
| Shunt trip device | / | | | | | BZ6F210CA | 100V AC 50Hz/100-110V AC 60Hz | | | |
| | | | | | BZ6F110CA | 110V AC 50Hz/100-127V AC 60Hz | | | | |
| | | | | | BZ6F710CA | 200V AC 50Hz/200-220V AC 60Hz | | | | |
| | | | | | BZ6F410CA | 220V AC 50Hz/220-240V AC 60Hz | | | | |
| | | | | | BZ6F510CA | 230V AC 50Hz/230-240V AC 60Hz | | | | |
| | | | | | BZ6FB10CA | 240V AC 50Hz | | | | |
| | | | | | BZ6F010CA | 380V AC 50Hz 380-415V AC 60Hz | | | | |
| | | | | | BZ6F810CA | 400V AC 50Hz 400-440V AC 60Hz | | | | |
| Undervoltage trip device | | | | | / | | | | BZ6R210C | 100V AC 50Hz/100-110V AC 60Hz |
| | | | | | | | | | BZ6R110C | 110V AC 50Hz/110-127V AC 60Hz |
| | BZ6RW10C | 200V AC 50Hz/200-220V AC 60Hz | | | | | | | | |
| | BZ6R410C | 220V AC 50Hz/220-240V AC 60Hz | | | | | | | | |
| | BZ6R510C | 230V AC 50Hz/230-240V AC 60Hz | | | | | | | | |
| | BZ6R810C | 240V AC 50Hz | | | | | | | | |
| | BZ6R010C | 380V AC 50Hz 380-415V AC 60Hz | | | | | | | | |
| | BZ6R910C | 400V AC 50Hz 400-440V AC 60Hz | | | | | | | | |
| | BZ6RF10C | 24V DC | | | | | | | | |
| | BZ6RT10C | 100-110V DC | | | | | | | | |

• 32, 50, 63, 100AF IEC/EN/GB/JIS/UL/CSA conformed

| Accessory | Type | | | | Operating voltage |
|---|---------------------|---------------------|-----------------------|----------------------|-------------------------------|
| | Lead wire system | | Terminal block system | | |
| | Left side | Right side | Left side | Right side | |
| Auxiliary switch | BZ6WL10CU | BZ6WR10CU | BZ6WL10CAU | BZ6WR10CAU | / |
| Auxiliary switch (low level circuit) | BZ6WDL10CU | BZ6WDR10CU | BZ6WDL10CAU | BZ6WDR10CAU | |
| Alarm switch | BZ6KL10CU | BZ6KR10CU | BZ6KL10CAU | BZ6KR10CAU | |
| Alarm switch (low level circuit) | BZ6KDL10CU | BZ6KDR10CU | BZ6KDL10CAU | BZ6KDR10CAU | |
| Auxiliary switch + Alarm switch | BZ6WKL10CU | BZ6WKR10CU | BZ6WKL10CAU | BZ6WKR10CAU | |
| Auxiliary switch + Alarm switch (low level circuit) | BZ6WDKDL10CU | BZ6WDKDR10CU | BZ6WDKDL10CAU | BZ6WDKDR10CAU | |
| Shunt trip device | - | - | - | BZ6F210CAU | |
| | - | - | - | BZ6F710CAU | 200V AC 50Hz/200-220V AC 60Hz |
| | - | - | - | BZ6F810CAU | 400V AC 50Hz/400-440V AC 60Hz |
| Undervoltage trip device | - | - | - | BZ6R210CAU | 100V AC 50Hz/100-110V AC 60Hz |
| | - | - | - | BZ6RW10CAU | 110V AC 50Hz/110-127V AC 60Hz |
| | - | - | - | BZ6R910CAU | 200V AC 50Hz/200-220V AC 60Hz |

07

Earth leakage Circuit Breakers

G-TWIN series

Internal accessories

• 125, 160, 250AF IEC/EN/GB/JIS/UL/CSA conformed

| Accessory | Type | | | | Operating voltage |
|---|------------------|-------------|-----------------------|--------------|-------------------------|
| | Lead wire system | | Terminal block system | | |
| | Left side | Right side | Left side | Right side * | |
| Auxiliary switch | BW9W1SG0 | BW9W1SG0-R | BW9W1SG0-A | - | - |
| Auxiliary switch (low level circuit) | BW9W1DG0 | BW9W1DG0-R | - * | | |
| Alarm switch | BW9K1SG0 | BW9K1SG0-R | BW9K1SG0-A | | |
| Alarm switch (low level circuit) | BW9K1DG0 | BW9K1DG0-R | - * | | |
| Auxiliary switch + Alarm switch | BW9WKSG0 | BW9WK1SG0-R | BW9WKSG0-A | | |
| Auxiliary switch + Alarm switch (low level circuit) | BW9WKDG0 | BW9WK1DG0-R | - * | | |
| Earth alarm switch | - | BW9L1SGA | - | | |
| Shunt trip device | BW9FRG0 | BW9FRG0 | BW9FRG0-A | | 24V AC/DC |
| | BW9FSG0 | BW9FSG0 | BW9FSG0-A | | 48V AC/DC |
| | BW9FAG0 | BW9FAG0 | BW9FAG0-A | | 100-120V AC/100-110V DC |
| | BW9F1G0 | BW9F1G0 | BW9F1G0-A | | 120-130V AC |
| | BW9FKG0 | BW9FKG0 | BW9FKG0-A | | 200-240V AC/200-220V DC |
| | BW9FBG0 | BW9FBG0 | BW9FBG0-A | | 277V AC |
| | BW9FPG0 | BW9FPG0 | BW9FPG0-A | | 380-440V AC |
| | BW9FHG0 | BW9FHG0 | BW9FHG0-A | | 440-480V AC |
| | BW9FJG0 | BW9FJG0 | BW9FJG0-A | | 500-550V AC |
| Undervoltage trip devices | BW9RGAR | - | BW9RGAR-A | | 24V DC |
| | BW9RGAS | | BW9RGAS-A | | 48V DC |
| | BW9RGAL | | BW9RGAL-A | | 100-110V DC |
| | BW9RGA5 | | BW9RGA5-A | | 125V DC |
| | BW9RGAA | | BW9RGAA-A | | 100-110V AC |
| | BW9RGAT | | BW9RGAT-A | | 110-130V AC |
| | BW9RGAK | | BW9RGAK-A | | 200-240V AC |
| | BW9RGAB | | BW9RGAB-A | | 277V AC |
| | BW9RGAP | | BW9RGAP-A | | 380-415V AC |
| | BW9RGAH | | BW9RGAH-A | | 440-480V AC |

Note: * Factory-mounted

• 400, 630, 800AF IEC/EN/GB/JIS/UL/CSA conformed

| Accessory | Type | | Operating voltage |
|--|------------------|-------------------------|-------------------------|
| | Lead wire system | Terminal block system * | |
| | Left side | | |
| Auxiliary switch x 1 | BW9W1SHA | - | - |
| Auxiliary switch x 2 | BW9W2SHA | | |
| Auxiliary switch (low level circuit) x 1 | BW9W1DHA | | |
| Auxiliary switch (low level circuit) x 2 | BW9W2DHA | | |
| Alarm switch x 1 | BW9K1SHA | | |
| Alarm switch x 2 | BW9K2SHA | | |
| Alarm switch (low level circuit) x 1 | BW9K1DHA | | |
| Alarm switch (low level circuit) x 2 | BW9K2DHA | | |
| Shunt trip device | BW9FHA-R | | 24-48V AC/DC |
| | BW9FHA-A | | 100-240V AC/100-220V DC |
| | BW9FHA-B | | 277V AC |
| | BW9FHA-P | | 380-550V AC |
| Undervoltage trip devices | BW9RHA-R | | 24V AC/DC |
| | BW9RHA-S | | 48V AC/DC |
| | BW9RHA-A | | 100-110 AC/DC |
| | BW9RHA-1 | | 120-130V AC/125V DC |
| | BW9RHA-K | | 200-240V AC/200-220V DC |
| | BW9RHA-B | | 277V AC |
| | BW9RHA-P | | 380-480V AC |

Note: * Factory-mounted